




INSIDE THE BOX: GLASS SHELF AND HARDWARE (4 MOLLYS, 6 SCREWS, and 2 BRACKETS)



RECOMMENDED TOOLS

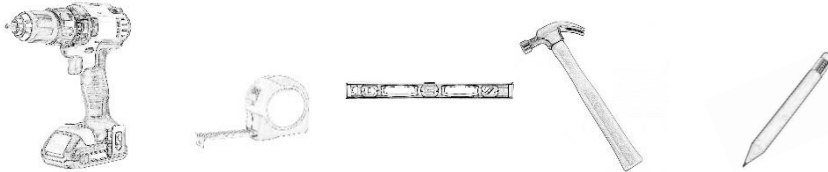

DRILL

TAPE MEASURE

LEVEL

HAMMER

PENCIL

- 1) Mark on the wall with a pencil where you would like to install the shelf. Use a tape measure for precision.
- 2) Measure the shelf to find its length. You are going to want to install your brackets on the wall at one half of the shelf's length. (Example: if the shelf is 8 inches long you are going to want to install the brackets at 4".)
- 3) With a tape measure, measure from the corner of the wall half the shelf's length and mark with a pencil.
- 4) Remove the upper part of the bracket for a guide. Place the bracket bottom hole at the point where you marked with a pencil. Make a new mark at both bracket holes.
- 5) Remove bracket and drill a hole on both marks.
- 6) Hammer the molly into both holes making sure that the molly is cohesive with the wall.
- 7) Check the line with a level.
- 8) Hold the top of the bracket up against the wall. Screw a screw through the bracket hole into the molly. Do this to both holes.
- 9) Tighten a screw into the lower part of the bracket to secure to the wall.
- 10) Repeat this process for the other bracket.
- 11) Insert the shelf where the gaps appear in the brackets.
- 12) Carefully tighten the screws making sure that the brackets are tightly gripping the shelf.



CONGRATULATIONS!

Installation of your new shelf is complete! Enjoy!